

## SmartMount<sup>™</sup>

### Extended Reach Articulating LCD Wall Arm

For 10" to 22" LCD Screens

**NEW!**

Patent Pending



The Extended Reach Articulating LCD Wall Arm supports 10" to 22" LCD screens. With internal cord management this mount folds flat against the wall or extends out up to 18.79". Its anodized aluminum finish elegantly complements offices, conference rooms, merchandising displays, hotel rooms or any room in the home. This three-link arm provides easy one-touch tilt and up to 180 degrees of swivel for virtually limitless viewing positions. Unsightly cords are routed internally within the arm to maintain the clean look of the installation. Ships pre-assembled for fast and easy installation.

- Fits 10" to 22" LCD screens
- Pivots and articulates in virtually all directions, even around corners and cabinets
- Frees up space by folding flat against the wall
- Keeps electronic wires routed internally to reduce clutter

**SAL730P, SAL730P-S**

# SmartMount™

## Extended Reach Articulating LCD Wall Arm


### For 10" to 22" LCD Screens

#### Model Numbers

SAL730P, SAL730P-S

#### Product Specifications

- Fits 10" to 22" LCD screens
- Pre-assembled for fast and easy installation
- Comes with VESA® 75/100 screen adapter plate
- Non-VESA adapter plates available (sold separately)
- Four pivot points for virtually limitless adjustments
- Ball joint design at screen for easy side-to-side movement and ±35° of tilt
- Offers 180° of swivel on a wall and up to 270° of swivel around the side of a cabinet or corner
- Anodized aluminum finish available in black or silver
- Built-in internal cord management conceals wires for a clean look
- Includes hardware for installation to the side of a cabinet and to a single wood stud or concrete
- UL tested to four times stated weight load

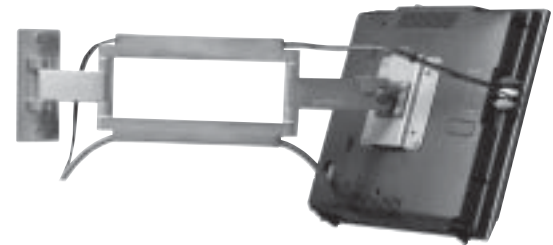

Built-in internal cord management channels

#### FEATURES

DEPTH	Fully Extended: 18.79" (47.73 cm)
DEPTH	Folded: 1.71" (4.3 cm)
WIDTH	Folded: 12" (30.48 cm)
LOAD CAPACITY	25 lbs (11.4 kg)
PRODUCT WEIGHT	3.6 lbs (1.5 kg)
FINISH	Anodized Aluminum
AVAILABLE COLORS	Black, SAL730P Silver, SAL730P-S
ACCESSORIES	Metal Stud Wall Accessory Kit (ACC908)
PATENTED	Patent Pending

#### Package Specifications

PACKAGE CONTENTS	Adjustable Arm, VESA Screen Adapter Plate, Mounting Hardware	
UNITS IN PACKAGE	1	
PACKAGE SIZE	12.25" (L) x 6.25" (W) x 3.25" (H) (31.25 x 15.87 x 8.25 cm)	
PACKAGE SHIP WEIGHT	5.2 lbs (2.35 kg)	
PACKAGE UPC CODE	SAL730P	735029237730
	SAL730P-S	735029237747

LIMITED 5-YR. WARRANTY

(800) 865-2112  
www.peerlessmounts.com

Peerless Industries, Inc.  
3215 W. North Avenue, Melrose Park, IL 60160  
(708) 865-8870 or (800) 865-2112 Fax: (708) 865-2941 www.peerlessmounts.com

© 2005 Peerless Industries, Inc. All rights reserved.  
SmartMount is a trademark and Peerless is a registered trademark of Peerless Industries, Inc.



LIT-0118